

KAOS Shades

Installation Instructions

Pocket mount - Recessed Tracks



INSTALLERS: PLEASE LEAVE THIS MANUAL WITH THE OWNER.



PARTS IN THE BOX




(2) U channel



(2) Track

Required Tools for Installation

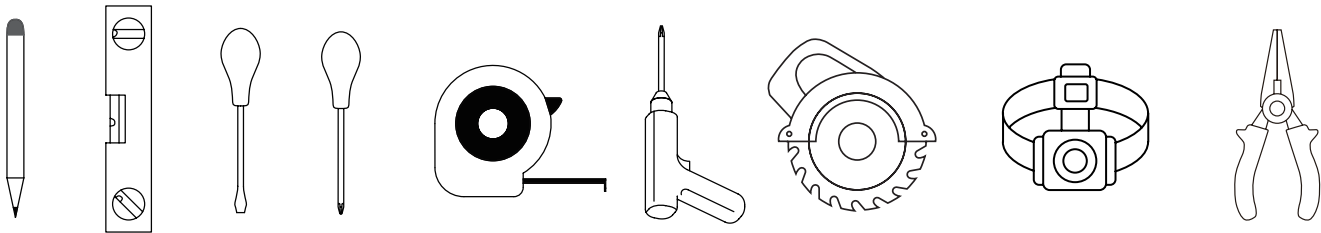

Note: Use a metal cutting saw blade



Please use this QR Code to access the updated installation instructions and related documents.

Technical Support: 512.832.6939
Hours of Support: 7:30am – 5pm CST


shadeinnovations.com
support@shadeinnovations.com

U CHANNEL INSTALLATION


- 1 Predrill the U-channel:** 2 holes for TOP, MIDDLE and BOTTOM. 1 hole every 12 inches in spacing. Attach the U-Channel beneath the brackets..

Secure the U-channels on both sides using the appropriate screws.

NOTE: Ensure the fasteners are capable of supporting the weight of the shade.

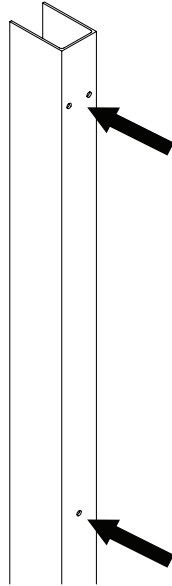


- 2** Use appropriate fasteners to mount the brackets to the ceiling or wall, aligning them according to the ordered shade width.

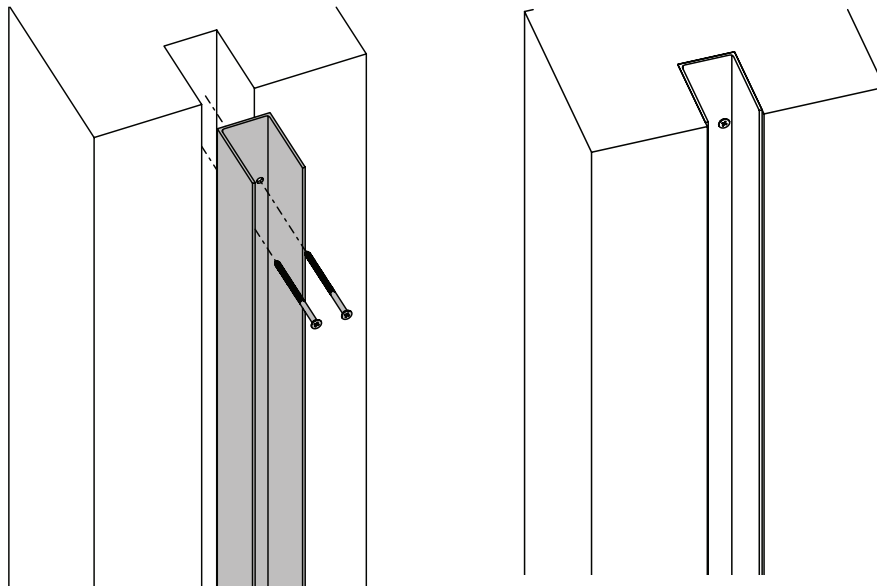


RECESSED TRACKS INSTALLATION

- 3** To remove the top cap, unscrew the two securing screws.

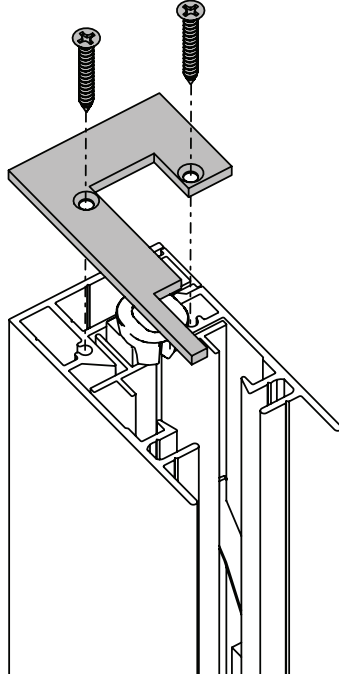


- 4** To remove the bottom cap, unscrew the two securing screws.

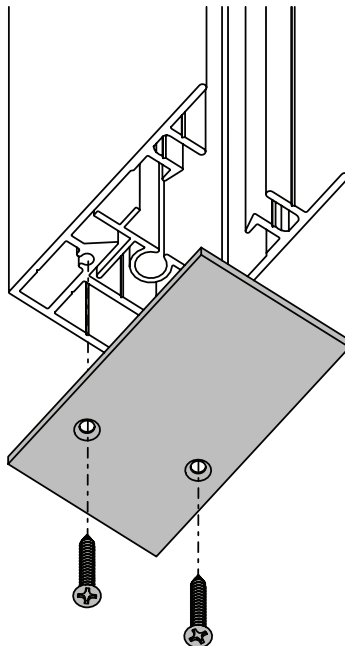


RECESSED TRACKS INSTALLATION

- 5** Loosen the screws holding the spring clips along the front of the track.

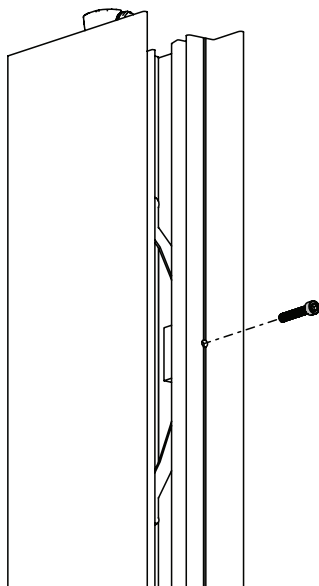


- 6** Push down on the spring clip and rotate it outward to release it from the track.

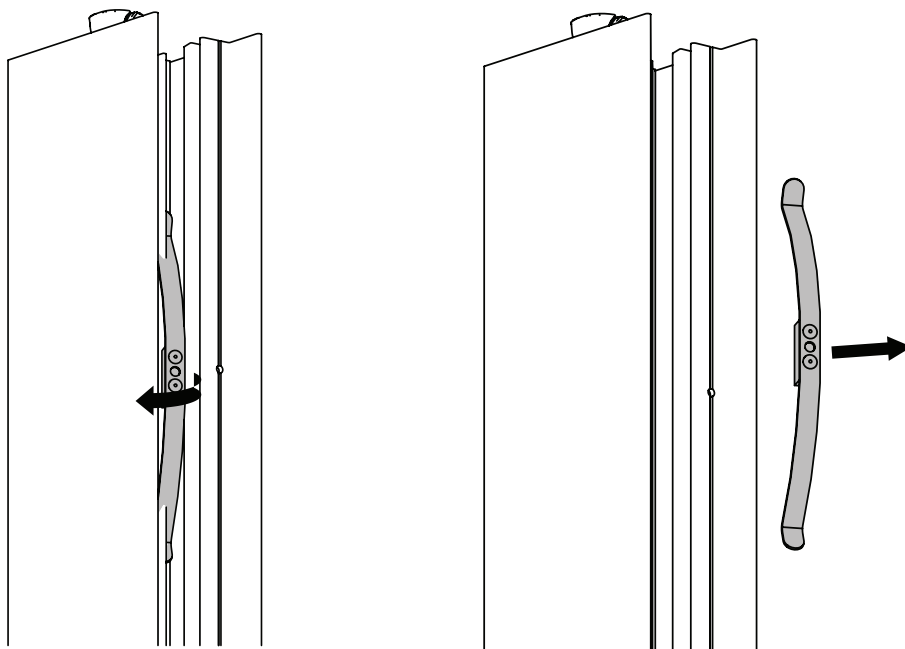


RECESSED TRACKS INSTALLATION

- 7** Pull out the V-track from the outer track.

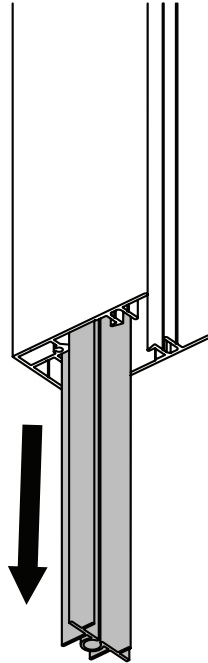


- 8** Pre-drill holes to secure the track to the U-channel. Use the centerline inside the track as a guide. Ensure you only drill through the first layer, and make the holes large enough for the correct screws.

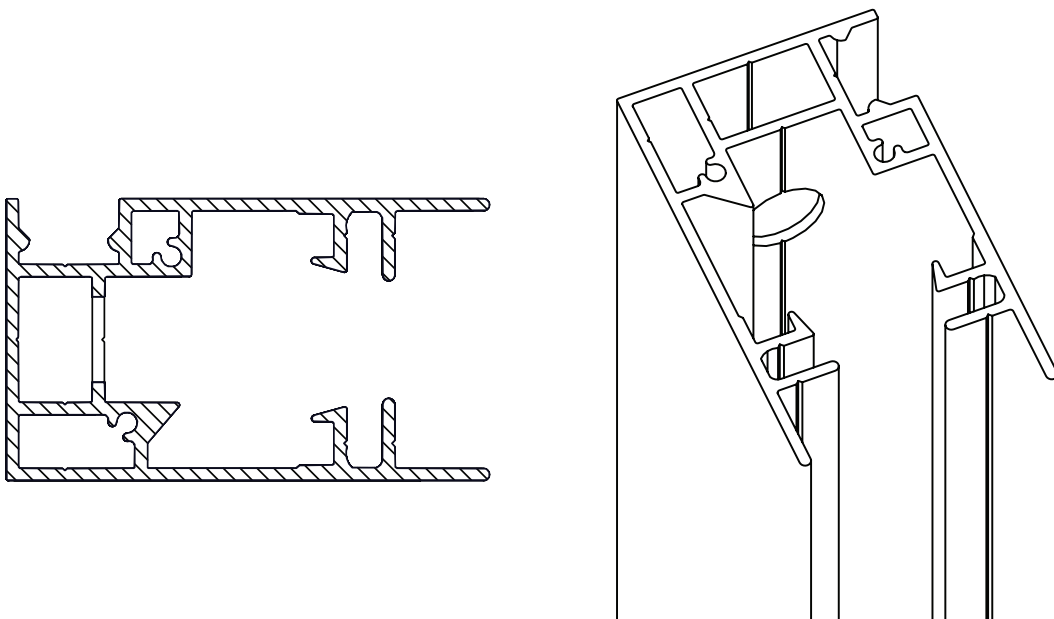


RECESSED TRACKS INSTALLATION

- 9** Reattach the top cap and secure it with the two provided screws.

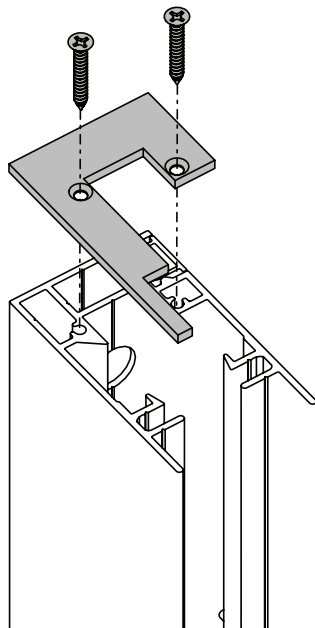


- 10** Reattach the bottom cap and secure it with the two provided screws.

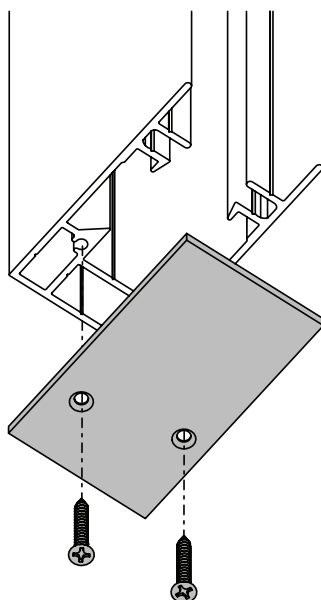


RECESSED TRACKS INSTALLATION

- 11** Insert the track into the U-channel.

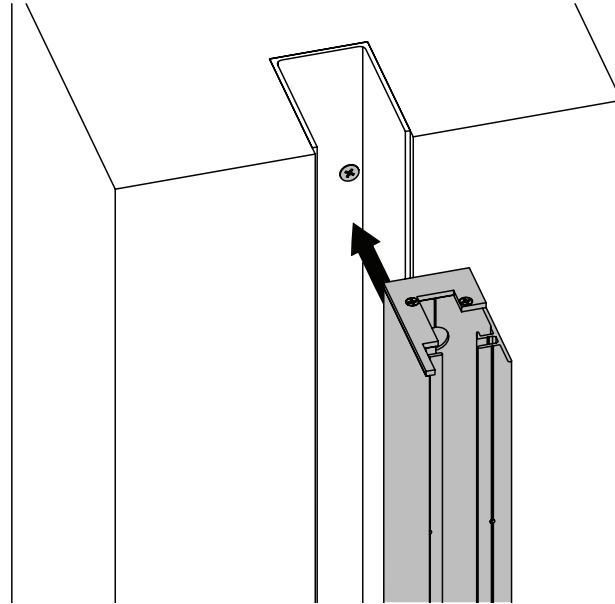


- 12** Secure the track to the U-channel using the appropriate screws.

NOTE: A shim may be needed at the back of the track for leveling. (Shims are not provided.)


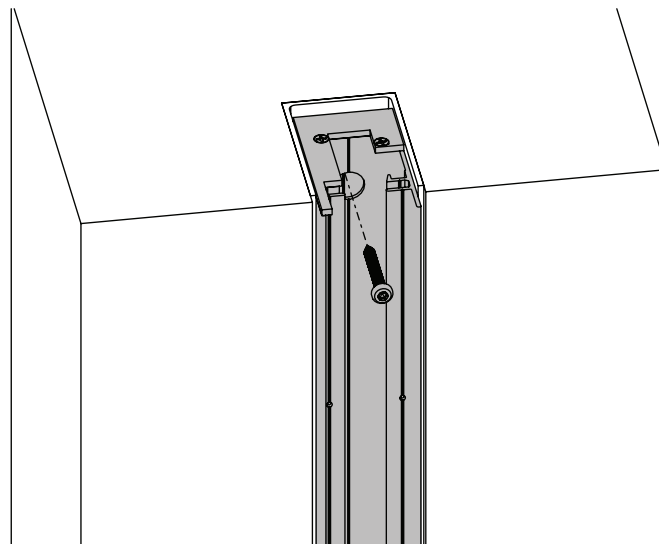


RECESSED TRACKS INSTALLATION

- 13** Insert the V-track at a slight angle.

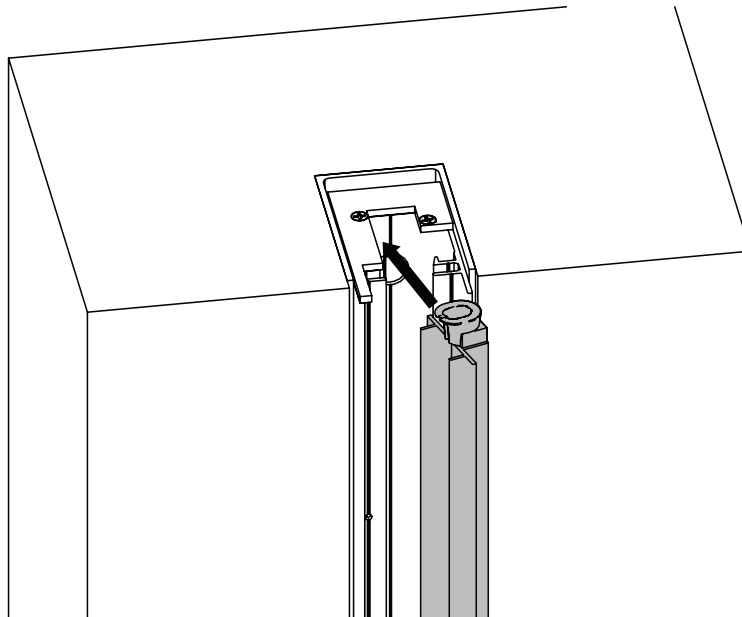


- 14** Once the V-track is inside the track, rotate it to position it correctly.

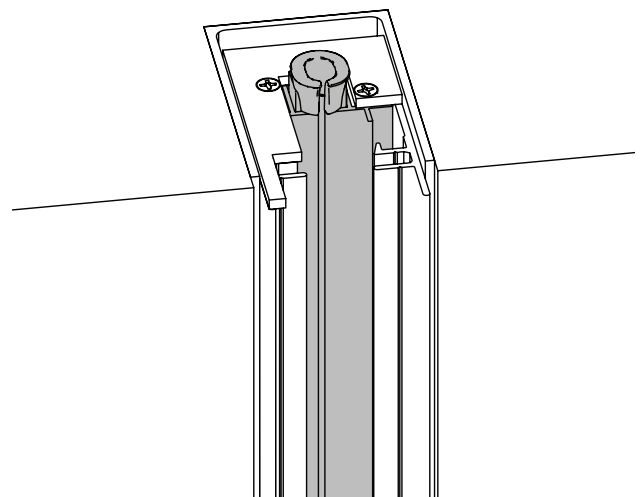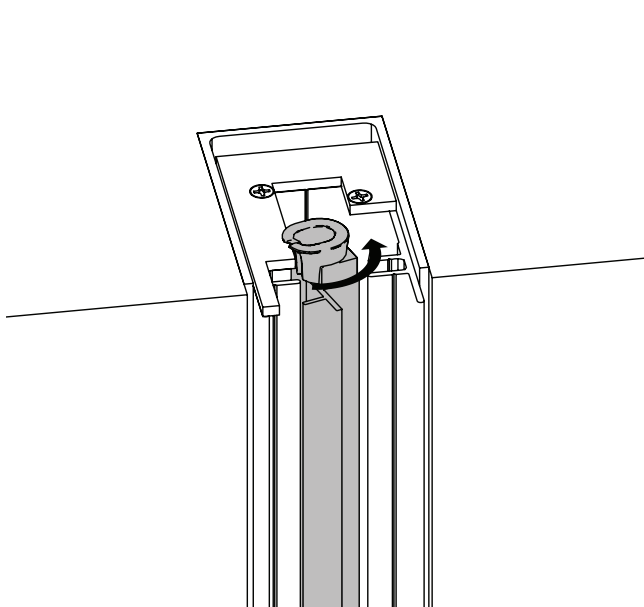


RECESSED TRACKS INSTALLATION

- 16** To reinstall the spring clip, push it between the V-track and the outer track, then rotate it into place. Ensure the hole in the spring clip aligns with the holes in the outer track.

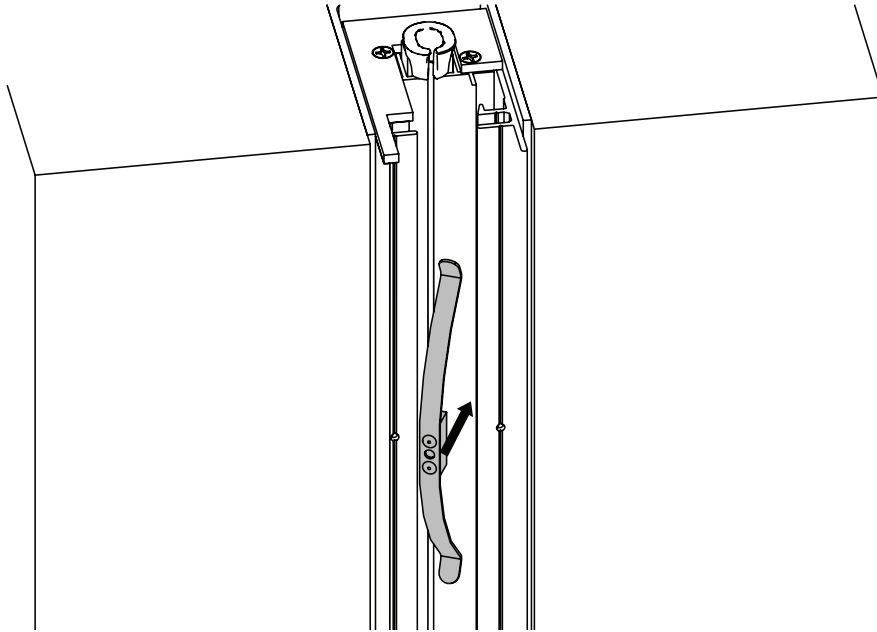

- 17** Reattach the spring clips and secure them with the screws you removed earlier.

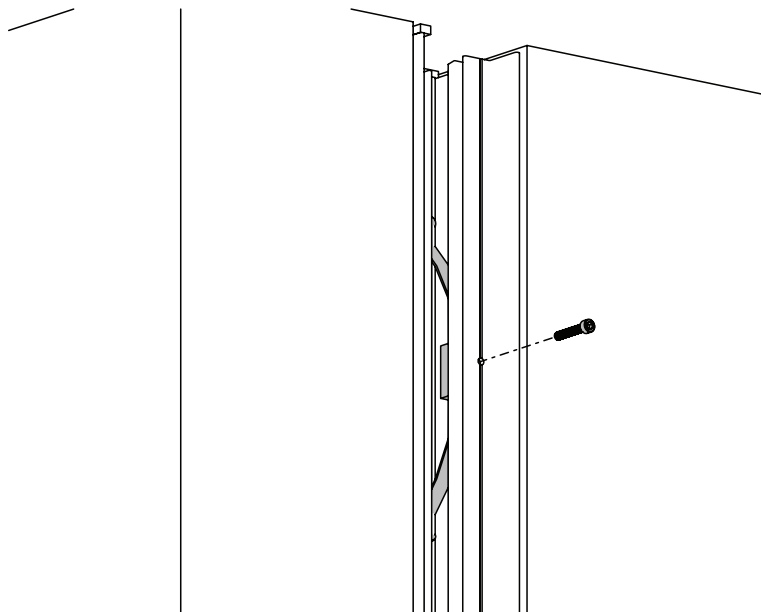

NOTE: You can now follow the remaining steps on the Pocket Mount instructions.



9715-B Burnet Rd, Suite 400 Austin, TX 78758
512.832.6939
www.shadeinnovations.com